



DPS24 OS Upgrade via CD

You can check the current O/S Version in the SETUP page.

1) Download the latest OS Version (dps24***.zip) from akaipro.com

2) Unzip the downloaded file

If your computer does not already have an UnZip utility:

* For Windows computers, use WinZip (www.winzip.com)

* For Mac computers, use Ziplt (www.maczipit.com)

-> The unzipped file is called DPS24.BIN

3) Write the unzipped file to an ISO-9660 CD-R/RW disk

* On Windows computers, ISO-9660 is the standard Data CD format

* On Mac computers, make sure to select ISO-9660 Data CD (not Macintosh CD)

4) Insert the CD in the DPS24

5) In the CD-R SETUP page (SHIFT + SETUP), wait until Disc Status shows: DATA CD

6) In the SETUP page, press F6 (OS) to access the OS UPGRADE page

7) Use Q1 to select Upgrade from: CD

8) Press F5 or F6 (UPGRADE)

-> The DPS24 will search the CD for the Operating System file

9) At the "Update Operating System to V*.**?" prompt, press F6 (YES)

*** DO NOT SWITCH POWER OFF DURING SOFTWARE UPGRADE ***

10) When the DPS24 displays "Flash Programming Completed!", press F6 (OK) and reboot

11) After reboot, Check the O/S Version in the SETUP page.